




TO SDG. PT.191A/B
OP.LOCATION
TO L. C. GATE(NO.487)
AT Km:963/37-39
TO L. C. GATE(NO.488)
AT Km:964/19-21
TO L. C. GATE(NO.489)
AT Km:966/15-17

SALEKASA
CLASS-SPL STD-III CODE-SKS
KM: 963.4
← UP/DN →

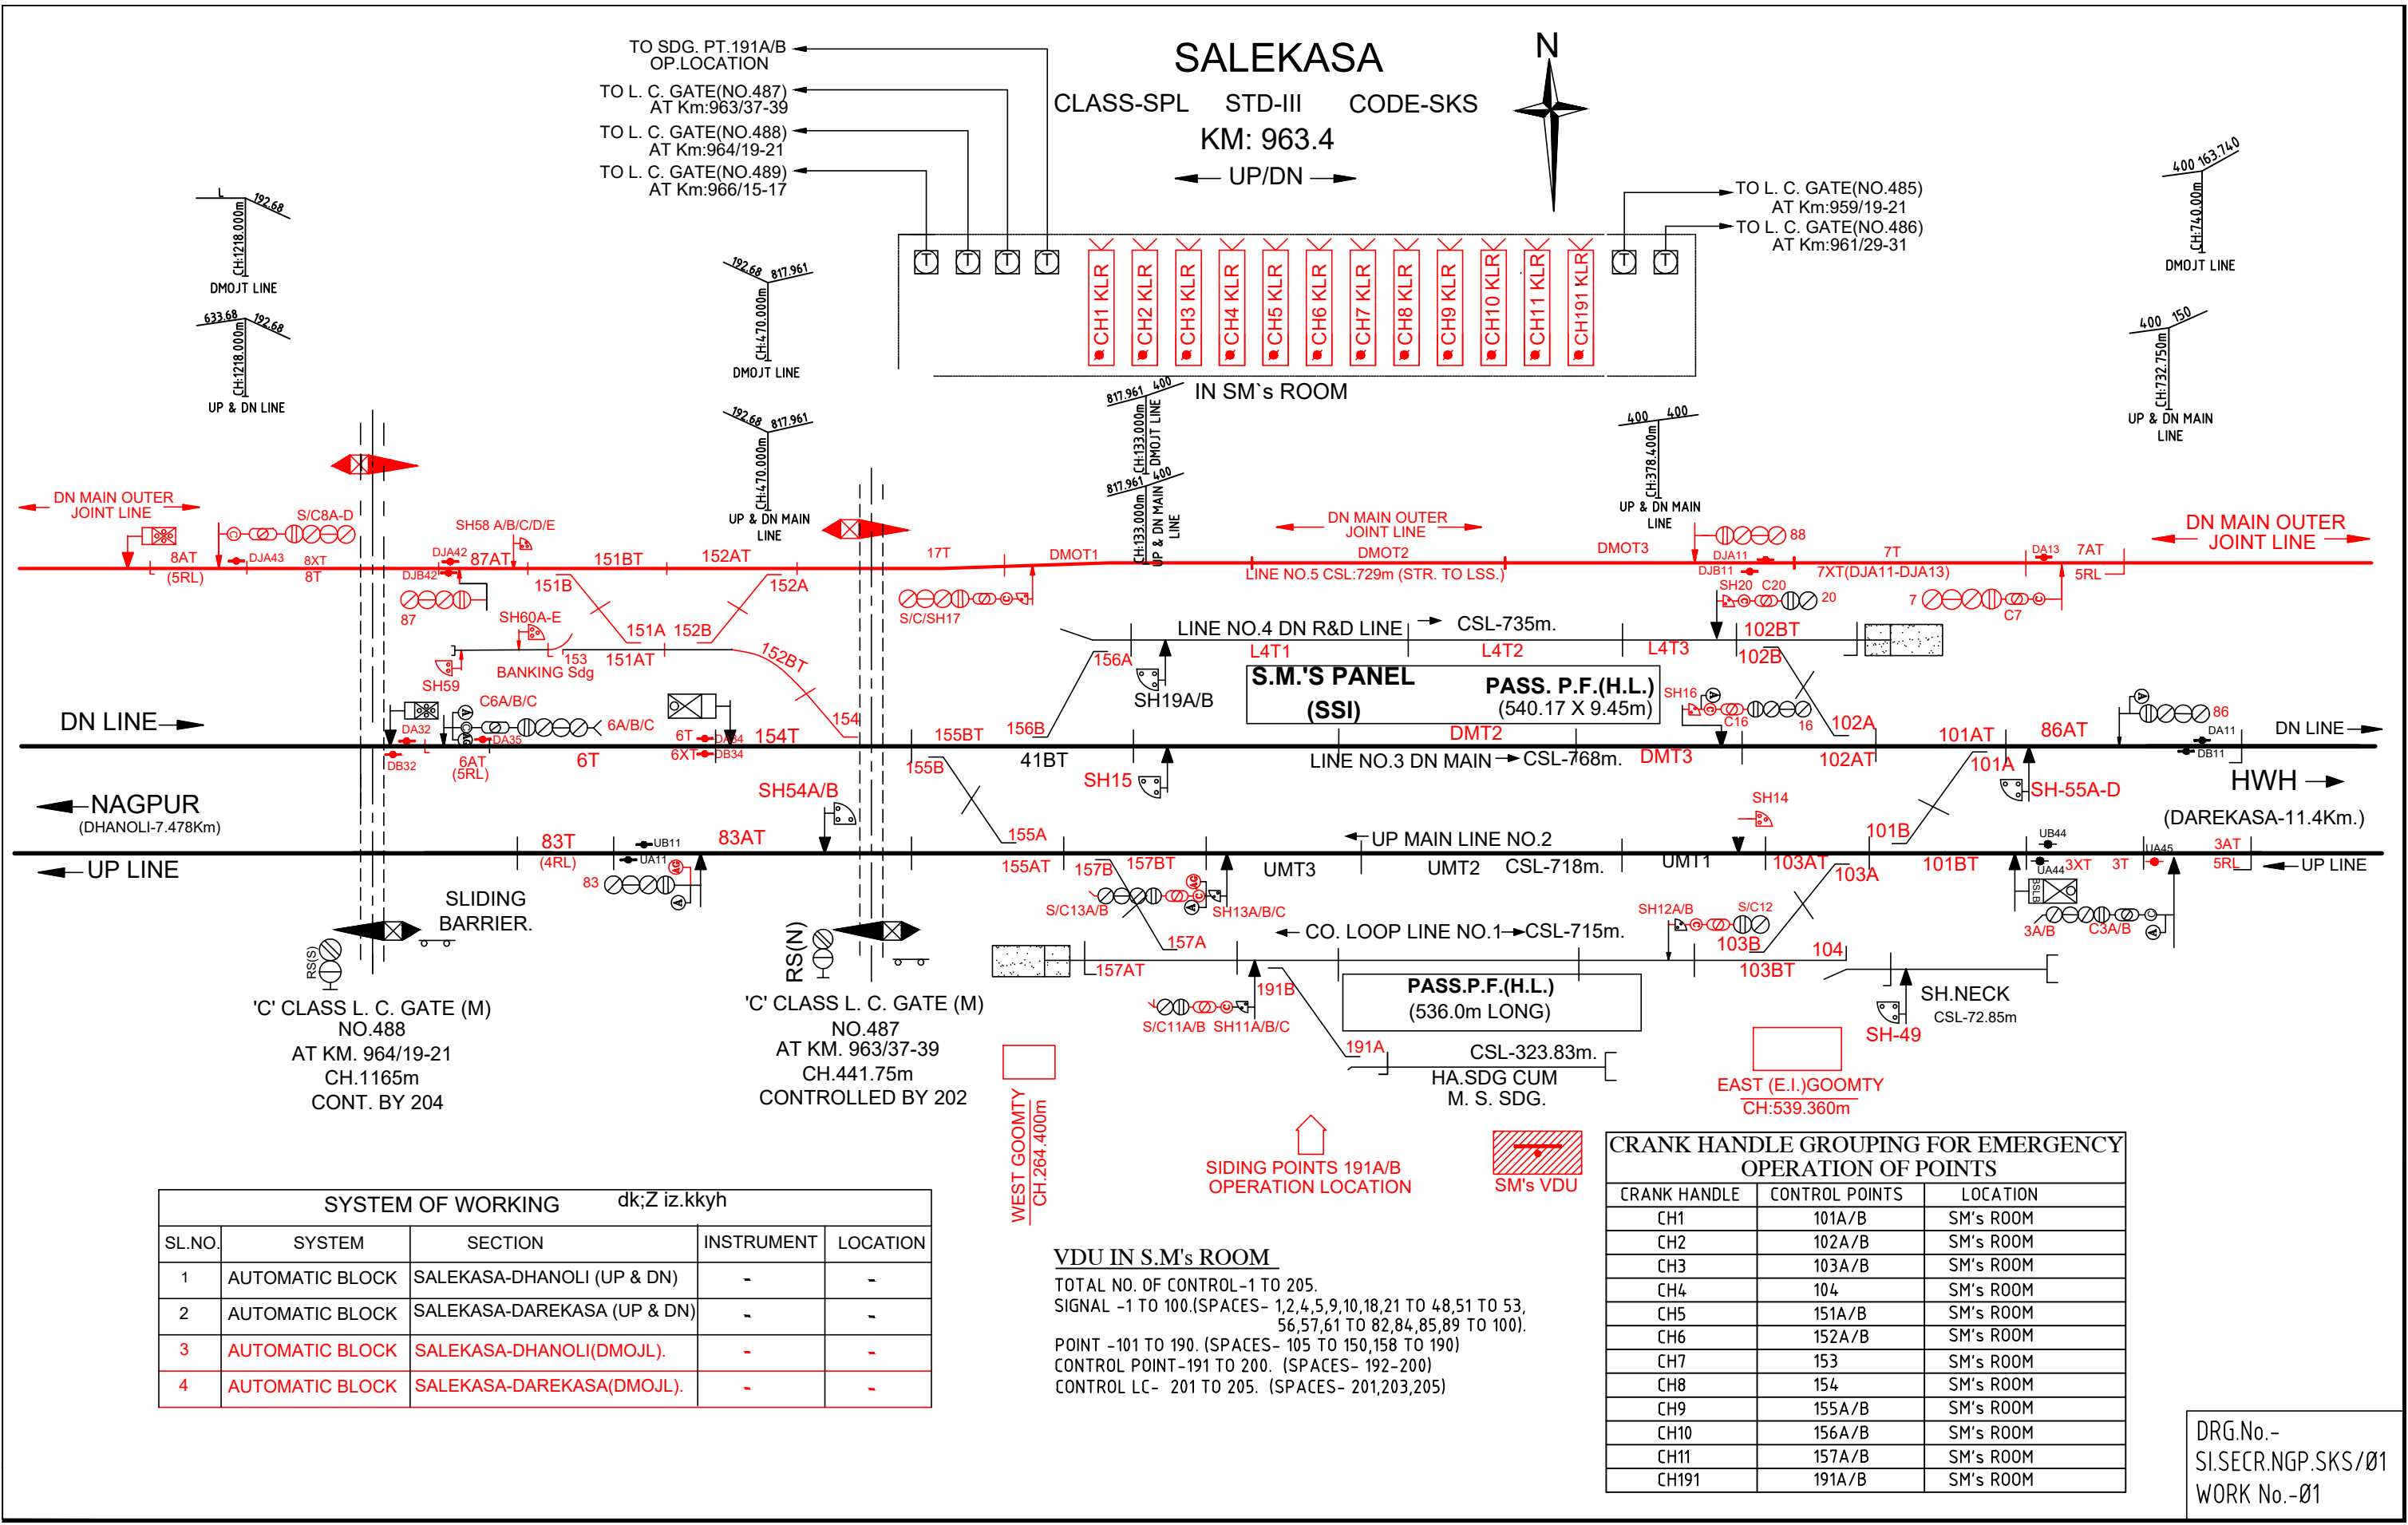

TO L. C. GATE(NO.485)
AT Km:959/19-21
TO L. C. GATE(NO.486)
AT Km:961/29-31

SYSTEM OF WORKING dk;Z iz.kkyh				
SL.NO.	SYSTEM	SECTION	INSTRUMENT	LOCATION
1	AUTOMATIC BLOCK	SALEKASA-DHANOLI (UP & DN)	-	-
2	AUTOMATIC BLOCK	SALEKASA-DAREKASA (UP & DN)	-	-
3	AUTOMATIC BLOCK	SALEKASA-DHANOLI(DMOJL).	-	-
4	AUTOMATIC BLOCK	SALEKASA-DAREKASA(DMOJL).	-	-

VDU IN S.M.'s ROOM
TOTAL NO. OF CONTROL-1 TO 205.
SIGNAL -1 TO 100.(SPACES- 1,2,4,5,9,10,18,21 TO 48,51 TO 53,
56,57,61 TO 82,84,85,89 TO 100).
POINT -101 TO 190. (SPACES- 105 TO 150,158 TO 190)
CONTROL POINT-191 TO 200. (SPACES- 192-200)
CONTROL LC- 201 TO 205. (SPACES- 201,203,205)

CRANK HANDLE GROUPING FOR EMERGENCY OPERATION OF POINTS		
CRANK HANDLE	CONTROL POINTS	LOCATION
CH1	101A/B	SM's ROOM
CH2	102A/B	SM's ROOM
CH3	103A/B	SM's ROOM
CH4	104	SM's ROOM
CH5	151A/B	SM's ROOM
CH6	152A/B	SM's ROOM
CH7	153	SM's ROOM
CH8	154	SM's ROOM
CH9	155A/B	SM's ROOM
CH10	156A/B	SM's ROOM
CH11	157A/B	SM's ROOM
CH191	191A/B	SM's ROOM

DRG.No.-
SI.SECR.NGP.SKS/01
WORK No.-01